

Equal Step Dists
Fastening exterior stringer and bolts fore and aft
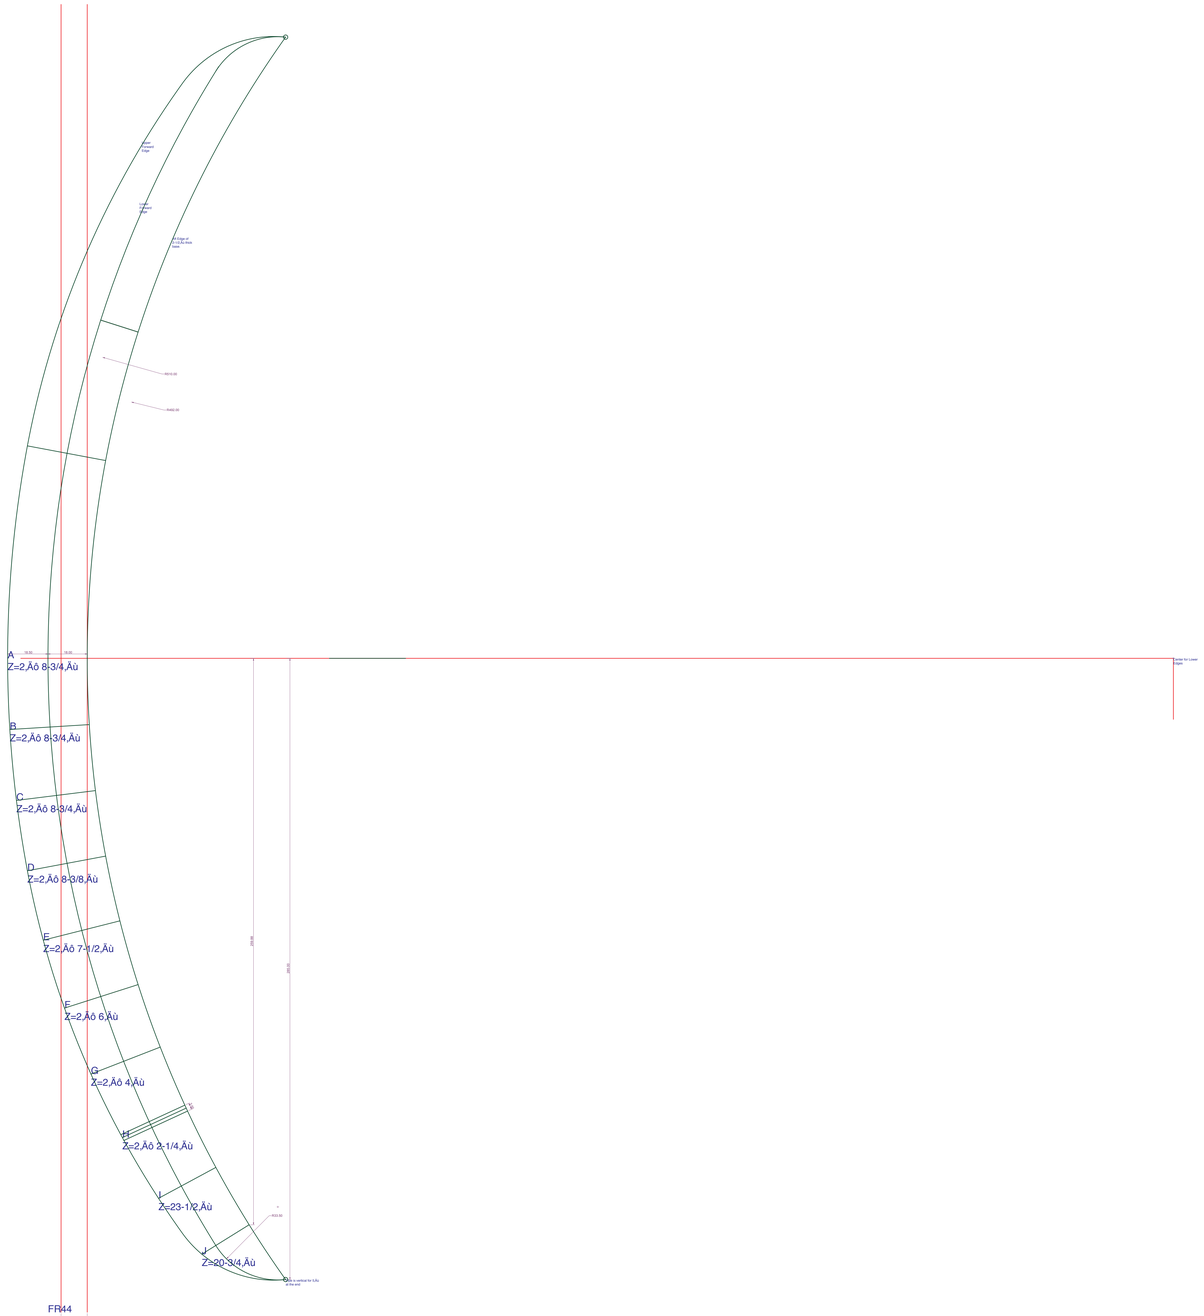
As built and the installation of the treads shall be that there is 11-1/2 in from the front edge of the tread to the vertical shown in the frames.